

## WATCH BATTERY SELECTION GUIDE

Type	Dimension		SONY	ENERGIZER	DURACELL	RAYOVAC	RENATA	VARTA	MALLORY	BEREC	OMEGA	BULOVA	TIMEX	WAHLTHAM	SEIKO	CITIZEN			
	Diamater	Ht																	
	(Φ)	(mm)																	
Silver Oxide Batteries 1.55V	4.8	1.0	SR410SW																
		1.6	SR416SW	No.337			337	337				623				SB-A5	280-75		
		2.1	SR421SW	No.348												SB-A6	280-77		
	5.8	1.2	SR512SW	No.335			335	335	V335			9948	622			SB-AB	280-68		
		1.6	SR516SW	No.317	D317		317	317	V317/ V566			9939	616	CA		SB-AR	280-58		
		2.1	SR521SW	No.379	D379		379	379	V379/V520		B-379L	9938	618	JA		SB-AC	280-59		
		2.7	SR527SW	No.319	D319		RW328 319	319	V319				615			SB-AE	280-60		
		1.0	SR610SW	No.333															
	6.8	1.4	SR614SW	No.339				339	V339						P				
		1.6	SR616SW	No.321	D321		321	321	V321/V540		B-321L	9934	611	DA	L	SB-AF	280-73		
		2.1	*SR621W	No.363														280-70	
			SR621SW	No.364	D364		364	364	V364/V531	D364	B-SR60L	9911	602	T	F	SB-AG	280-34		
		2.6	*SR626W	No.376			376	376					619	MA			SB-BW	280-72	
	SR626SW		No.377	D377		377	377	V377/V565		B-337L	9933	606	BA	I	SB-AW	280-39			
	7.9	1.2	SR712SW	No.346			346	346	V346			9949	628			SB-AH	280-66		
		1.4	SR714SW	No.341					V341			9943	627		J				
		1.6	*SR716W	No.314															
			SR716SW	No.315	D315		315	315	V315/ V530		B-315L	9937	614	HA	N	SB-AT	280-56		
		2.1	*SR721W	No.361	D361		361	361	V361		B-SR58H				X	C	SB-BK	280-53	
			SR721SW	No.362	D362		362	362	V362/V532	D362	B-SR58L	9916	601	S	C1	SB-AK	280-29		
		2.6	*SR726W	No.396	D396		396	396	V396/V556	D396	B-SR59H		612	V			SB-BL	280-52	
			SR726SW	No.397	D397		397	397	V397/V536	D397	B-SR59L	9931	607	N	H	SB-AL	280-28		
		3.1	SR731SW	No.329	D329		329	329	V329/V525										
		3.6	*SR41W	No.392	D392		392	392	V392/ V547	D392	B-SR41H	9909	247B			K		SB-B1	280-13
			SR41SW	No.384	D384		384	384	V384/V527	10L15	B-SR41L	9919/9920	247			A	SB-A1	280-18	
		5.4	*SR48W	No.393	D393		RW48	393	V393	D393	B-SR48H	9915	255		F		SB-B1	SB-B3	
		9.5	1.0	*SR910W	No.311														
	1.6		*SR916W	No.372	D372													280-61	
			SR916SW	No.373	D373		373	373	V373/V539		B-373L	9936	617	WA	M	SR-AJ	280-45		
	2.0		*SR920W	No.370	D370		370	370	V370		B-370H	9945	620	Z		SB-BN	280-51		
			SR920SW	No.371	D371		371	371	V371/ V537		B-371L	9929	605		G	SB-AN	280-31		
	2.7		*SR927W	No.399	D399		399	399	V399/ V543		B-SR57H		613	W		SB-BP	280-44		
			SR927SW	No.395	D395		395	395	V395/V523	D395	B-SR57L	9930	610			K	SB-AP	280-48	
	3.6	SR936SW	No.394	D394		394	394	V394/V524	D394	B-SR45L	9919	625	LA		SB-A4	280-17			
	11.6	1.6	*SR1116W	No.365				365						ZA					
			SR1116SW	No.366	D366		366	366	V366/V538				608					280-46	
		2.0	SR1120W	No.391	D391		391	391	V391/V553	D391	B-SR55H	9921	609	L		SB-BS	280-30		
			SR1120SW	No.381	D381		381	381	V381/ V533	D381	B-SR55L	9922	317		D	SB-AS	280-27		
		3.0	*SR1130W	No.389	D389		389	389	V389/ V554	D389	B-SR54H	9926	626	M		SB-BU	280-15		
			SR1130SW	No.390	D390		390	390	V390/V534	D390	B-SR54L	9924	603		B	SB-AU	280-24		
3.2		No.344	No.344	D344		344	344	V344/V529	WS-12	B-SR42L	9923	242, 604							
4.2		*SR43W	No.386	D386		386	386	V386/V548	D386	B-SR43H		260		H		SB-B8	280-41		
		SR43SW	No.301	D301		301	301	V301/ V528	D301	B-SR43L	9902	226		D	SB-A8	280-01			
5.4	*SR44W	No.357	D357		357	357	V357/V541	D357	B-SR44H	9913/9914	228		J		SB-B9				
	SR44SW	No.303	D303		303	303	V303/V521	D303	B-SR44L				A		SB-A9	280-08			

(\*) Use the batteries marked with an asterisk for watches equipped with lamp, alarms.